



**HB-036**  
**Archer's Den Skyview Hunting Ground Blind**  
Instruction Manual



**ENCOMPASS**  
International

**ENCOMPASSINTL.COM**

# Instruction and Safety Manual

## WARNING

For your safety, be sure to read all instructions and warnings carefully.

**THIS BLIND IS NOT FIREPROOF. KEEP AWAY FROM ALL SOURCES OF OPEN FLAME OR HIGH HEAT.** THE FLAME RESISTANT FABRIC MEETS THE REQUIREMENTS OF CPAI-84 BUT IT WILL BURN IF LEFT IN CONTACT WITH OPEN FLAME OR EXTREME HEAT. THE APPLICATION OF ANY FOREIGN SUBSTANCE TO THE FABRIC MAY RENDER THE FLAME RESISTANT PROPERTIES INEFFECTIVE.

### GENERAL GUIDELINES FOR YOUR BLIND

**Avoid leaving blind outdoors for any extended period of time. Prolonged exposure to sunlight may cause fabric to fade.**

**Never allow children to play with this product without adult supervision.**

**Never allow material to cover your face. It can cause suffocation, death.**

**Never allow anyone to use lighted candles, matches or other sources of fire near this product.**

**Never use a heater in this blind. Fumes could cause sickness or death.**

#### Care instructions:

Spot clean with mild soap and water. Ensure blind is dry before transporting or storing to prevent mildew and damage. Store in cool, dry place out of direct sunlight.

*Keep these instructions for future reference.*

**(HB-036)**

## Package Contents


- Part # HB-036 - Hunting Blind
- Part # 1324 - Carrying Case
- Part # 1301 - Ground Stakes (16) w/ bag
- Part # 1302 - Tie Down Cords (4)
- Part # 1326 - Fiberglass Poles (3) w/ bag
- Part # SK-035 - Shoot-thru Screens (8)
- Part # SK-036 - Ceiling Shoot-thru Screens (2)

Please inspect the shipping carton for damage or evidence that it may have been opened before you received it. Then inspect your hunting blind carefully. Compare it to the picture on the product label and the picture illustration in your instructions. If for any reason you are not satisfied with the product, do not use it until the problem is corrected.

## WARNING

- The construction of this hunting blind uses spring steel and will open quickly. Always hold hunting blind away from your body during set-up.


## SET-UP

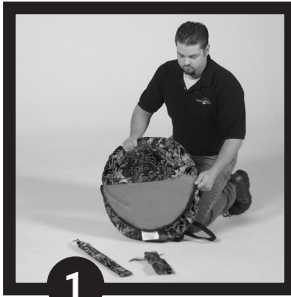

1  
Remove your hunting blind from its carrying case by holding all three rings together.



2  
Carefully open the blind while holding two of the rings.

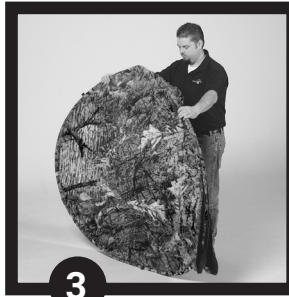


3  
The blind will spring out and open for separating sections.



4  
Separate the walls of the blind by unfolding into two walls.




5  
Then separate the remaining walls to form all four walls.

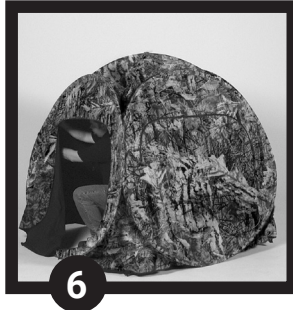


6  
Extend the poles to full length and insert into the wall pockets on the inside of the blind. The poles should form an X in the center of roof. Tie poles together using cloth strings.


## TIE DOWN CORDS

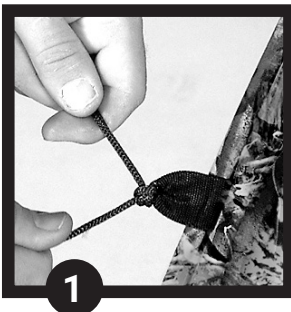

1  
Tie a tie down cord to each of the tie down cord loops on the sides of your blind. Each tie down cord will be staked out to each side of the blind. (P1)

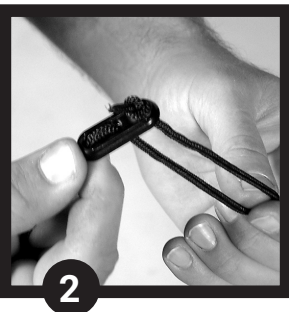

2  
Pull the tie down cords tight. (P2)

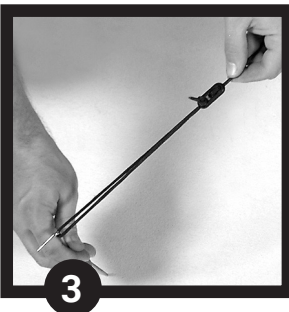

3  
Use the plastic slides and cinch the cords until the blind is secure. (P3)

## WARNING

- Remove all ground stakes, tie down cords, and roof support poles before attempting to fold up blind.

## TEAR DOWN



1  
Standing in the center of walls, facing the blind, pull the opposite side centers of the two walls toward you.




2  
Fold sides together.




3  
Your blind should be in this position. Place hands at 10 and 2 o'clock at top of blind.



4  
Fold the blind towards the ground till you are about 2 feet from the ground.

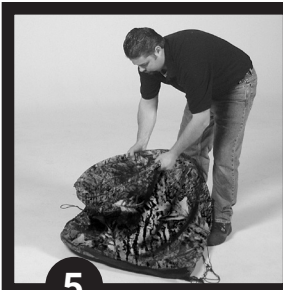


5  
Move your hands down about 6 inches and pull both sides together.

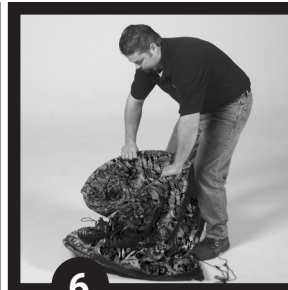


6  
Rest the blind between your knees, then rotate your hands so your knuckles are facing in.



7  
Fold the blind towards your feet until top of blind is touching your feet.

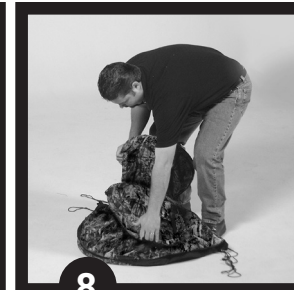

8  
Fold the loop in your left hand down.

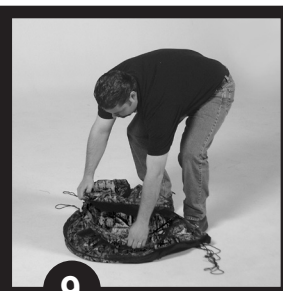

9  
Fold the loop in your right hand down.



10  
Even the loops and stow away.