



**HB-067**  
**Hunter's Den 270 Hunting Ground Blind**  
Instruction Manual



**ENCOMPASS**  
International

**ENCOMPASSINTL.COM**

# Instruction and Safety Manual

## WARNING

For your safety, be sure to read all instructions and warnings carefully.

**THIS BLIND IS NOT FIREPROOF. KEEP AWAY FROM ALL SOURCES OF OPEN FLAME OR HIGH HEAT.** THE FLAME RESISTANT FABRIC MEETS THE REQUIREMENTS OF CPAI-84 BUT IT WILL BURN IF LEFT IN CONTACT WITH OPEN FLAME OR EXTREME HEAT. THE APPLICATION OF ANY FOREIGN SUBSTANCE TO THE FABRIC MAY RENDER THE FLAME RESISTANT PROPERTIES INEFFECTIVE.

### GENERAL GUIDELINES FOR YOUR BLIND

**Avoid leaving blind outdoors for any extended period of time. Prolonged exposure to sunlight may cause fabric to fade.**

**Never allow children to play with this product without adult supervision.**

**Never allow material to cover your face. It can cause suffocation, death.**

**Never allow anyone to use lighted candles, matches or other sources of fire near this product.**

**Never use a heater in this blind. Fumes could cause sickness or death.**

#### Care instructions:

Spot clean with mild soap and water. Ensure blind is dry before transporting or storing to prevent mildew and damage. Store in cool, dry place out of direct sunlight.

*Keep these instructions for future reference.*

(HB-067)

## Package Contents

- Part # HB-067 - Hunting Blind
- Part # 1309 - Carrying Case
- Part # 1301 - Ground Stakes (8) w/ bag
- Part # 1302 - Tie Down Cords (4)
- Part # SK-067 - Shoot thru Screens (16)

Please inspect the shipping carton for damage or evidence that it may have been opened before you received it. Then inspect your hunting blind carefully. Compare it to the picture on the product label and the picture illustration in your instructions. If for any reason you are not satisfied with the product, do not use it until the problem is corrected.

## WARNING

- For your safety, be sure to read all instructions carefully.

## SET-UP



**1**  
Remove your hunting blind from its carrying bag and stand the blind on the flex block.



**2**  
Fold the blind flat with the camouflage side (outside) facing up.



**3**  
Stake all four corners of the blind down.



**4**  
Grab the handle in the center of the roof.



**5**  
Pull up on the handle until the roof pops out.



**6**  
Let the roof lay down and grab the handle in the center of the wall in front of you and pull out, as you did for the roof.



**7**  
Work your way around to the next wall and pull out on the handle until the wall pops out.




**8**  
Continue to the other two walls and repeat pulling on the wall handles until all four walls are popped out. Your blind is now set.


## TIE DOWN CORDS



**1**  
Tie the adjustable tie down ropes to the handles in the center of all four walls. Stake them into the ground, adjust as needed, and your blind is secure.

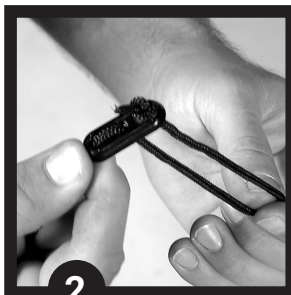

**2**  
Pull the tie down cords tight.

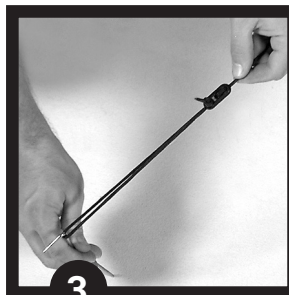

**3**  
Use the plastic slides and cinch the cords until the blind is secure.

## WARNING

- Remove all ground stakes, tie down cords, and roof support poles before attempting to fold up blind.

## TEAR DOWN



1

Remove the stakes securing the adjustable tie down ropes and push down the center of the roof until it collapses.



2

Push in on the center of the wall facing you until it collapses.




3

Work your way to the next wall and push in until it collapses.



4

Continue to the other two walls and repeat pushing in the walls until all four walls are collapsed.

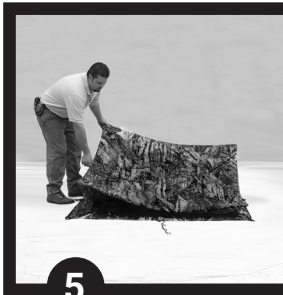

5

Your blind is now collapsed and it will lay flat on the ground.




6

Grab the two corners in front of you and fold together.



7

Grab the other two corners and fold together so that all four corners are folded.

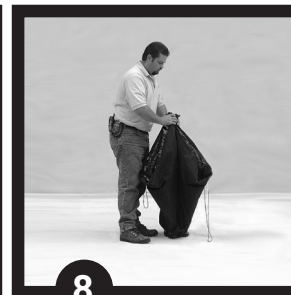

8

Your blind is ready to be put back into the carrying bag.