



TTRXL-MO
Truck Tent Full Size
Instruction Manual



ENCOMPASS
International

ENCOMPASSINTL.COM

Instruction and Safety Manual

PACKAGE CONTENTS

- Camping Tent Body

Part # TTRXL-MO-01B




- Camping Tent Rainfly

Part # TTRXL-MO-01F



- Carrying Case

Part # TTRXL-MO-01C

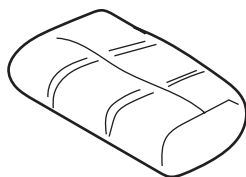

- **A** Dome Poles • [Gray Tips] 141.7" (2)

Part # 18010

- **B** Roof Pole • [White T Tips] 109.4" (1)


Part # 18011

- **C** Door Pole • [Blue Tips] 113.7" (1)

Part # 18012

- **D** Window Pole • [Black Tips] 110.7" (1)

Part # 18013

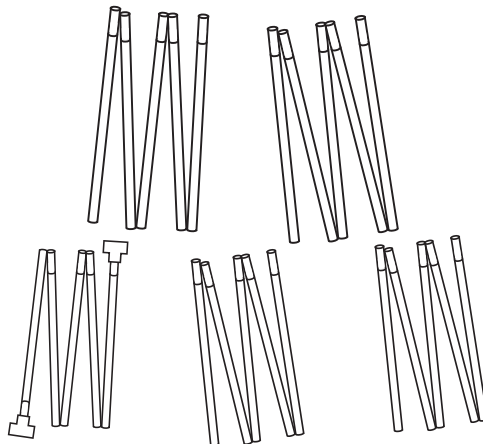

WARNING

For your safety, be sure to read all instructions and warnings carefully.

Keep these instructions for future reference.

GENERAL GUIDELINES FOR YOUR TENT

Store your tent in a cool dry place, free of native brush, dirt & any debris.

Avoid leaving tent outdoors for any extended period of time. Prolonged exposure to sunlight may cause fabric to fade.

Never allow children to play with this product without adult supervision.

Never store tent wet or damp.

Never allow material to cover your face. It can cause suffocation, death.

Never allow anyone to use lighted candles, matches or other sources of fire near this product.

Never expose this tent to any open flame. This product is not fireproof.

Never use a heater in this tent.

WARNING

KEEP ALL FLAME AND HEAT SOURCES AWAY FROM THIS TENT. THIS TENT MEETS THE FLAMMABILITY REQUIREMENTS OF CPAI-84. Fabric will catch fire if exposed to flame. This tent is made with flame resistant fabric. IT IS NOT FIRE PROOF. This fabric will burn if left in continuous contact with any flame/ extreme heat source. The application of any foreign substance to the fabric may render the flame resistant properties ineffective.

ADVERTENCIA

Mantener todo tipo de fuego y sistemas de calor lejos de la tela de esta tienda de campaña. ESTA TIENDA CUMPLE LOS REQUISITOS DE LA INFLAMABILIDAD DE CPAI-84. La tela puede prender en fuego si se expone. Esta tienda de campaña esta hecha con tela resistente al fuego. No es totalmente resistente al fuego. Esta tela se quema si se deja en contacto continuo con cualquier sistema de calor extremo y de fuego. La aplicación de cualquier sustancia extraña a la tela puede rendir las propiedades de resistencia al fuego ineficaz.

MISE EN GARDE

TENIR LE TISSU DE CETTE TENTE LOIN DE TOUTE FLAMME ET DE TOUTE SOURCE DE CHALEUR. CETTE TENTE RÉPOND AUX EXIGENCES D'INFLAMMABILITÉ DE CPAI-84. Cette tente est fabriquée d'un tissu résistant au feu, mais qui n'est pas ininflammable. Ce tissu brûlera s'il est laissé en contact continu avec une source d'inflammation.

INITIAL SETUP

Before you take your new tent on a camping trip, you need to set it up to become familiar with it and allow the material to air out.

SELECT YOUR CAMPSITE

Choose a site that will allow the truck bed to drain well in the event that it rains. Make sure truck is parked. Remove any items from the truck bed. The tailgate will need to be lowered in the open position before installing the tent.

UNROLL THE TENT AND ASSEMBLE THE POLES

Unroll the tent body and lay the floor flat on the ground. It will be easier to insert the poles than if you tried to erect the tent while it is in the truck bed. Unzip the door. Carefully unfold the poles and allow them to slide together. If the poles snap together quickly, this can lead to serious pole damage. Lay out the assembled poles according to length.


ERECT THE TENT

Identify the two longest poles. These poles will go corner to corner, forming the dome of the tent.

On the dome portion of the tent identify the camouflage pole sleeves that make an 'X' at the top dome of the tent.

Note: The poles may become stuck on the tent sleeve while you are pushing the pole through. Do not force the pole through, carefully lead and feed the pole through.

Insert the two longest aluminum poles through the two pole sleeves that make an 'X' at the top dome of the tent. Make sure the poles are secured in the black pole pockets

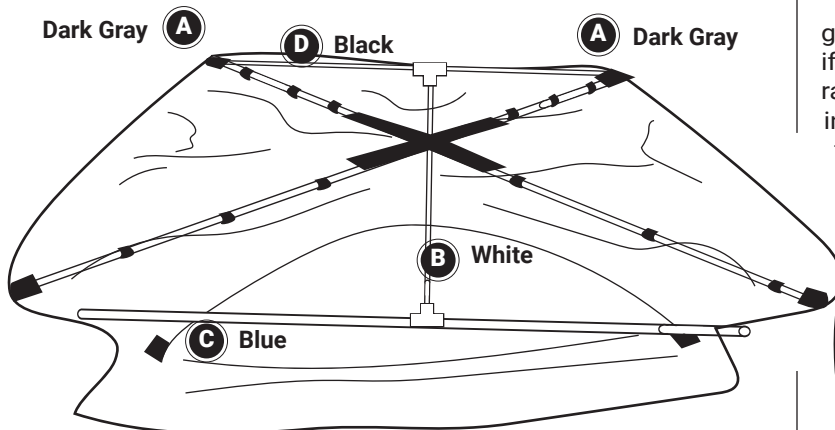

at each corner of the tent. The black pole pockets are located where the poles end at each corner of the tent. When the tent is placed into the bed of the truck, these four black tent pole pockets will rest on the top edge of the truck bed at each corner.

Attach the pole clips to further secure the poles to the tent.

Identify the pole with the blue tape on the ends. This pole will form the arch of the doorway. Insert the pole through the pole sleeve used to support the door / entrance of the tent, making sure the poles are secured in the black pole pockets. The black pole pockets are located at each corner of the door.

Identify the pole with the black tips. This pole will form the arch of the window. Insert the pole through the pole sleeves used to support the window, making sure the poles are secured in the black pole pockets. This pole shares the black pole pockets with the poles that form the dome of the tent.

Identify the pole with the white "T" junction on each end. This pole is secured on the outside the tent. It will run from the rear of the tent (closest to the truck cab) to the front of the tent (closest to the tailgate) along the roof outside the tent. Use the white plastic 'T' junction connections to connect the roof support pole to the poles supporting the roof cab window and tent door.

Use the plastic clips and tie located along the roof centerline to secure the poles in place.

SECURE TENT TO TRUCK

With the tailgate down, lift the tent into the truck bed.


Locate the tents elastic side straps. Use the plastic hooks on the tents side straps to loosely attach the tent to the trucks body.

Locate the tents tailgate straps. They are located at the front door of the tent. Use the plastic hooks on the tents tailgate straps to connect and secure the doorway of the tent to the tailgate.

Tighten all straps.

ATTACH THE RAINFLY

Find the side of the rainfly with four straps. This side will go over the door. Drape the rainfly over the tent, aligning if necessary. Use the plastic quick clips to connect the rainfly to the main tent body. The tent's quick clips are in the same location as the black pole pockets. Connect the clips and adjust the length of each strap to align the rainfly to the tent body.

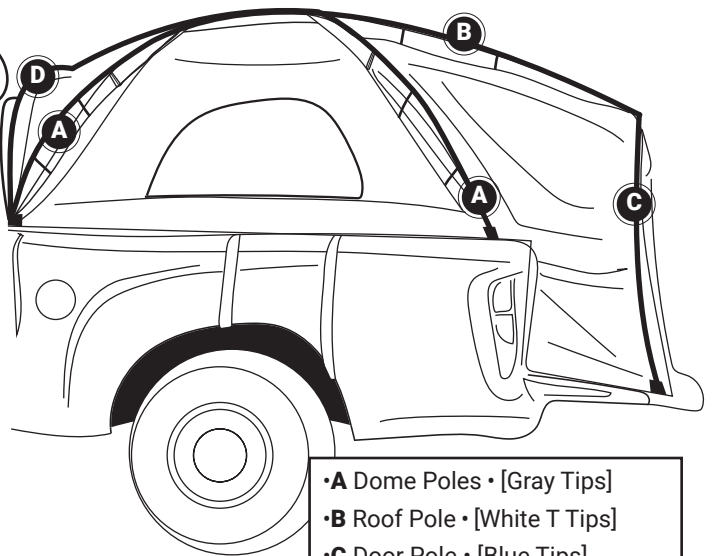

- A Dome Poles • [Gray Tips]
- B Roof Pole • [White T Tips]
- C Door Pole • [Blue Tips]
- D Window Pole • [Black Tips]

Care instructions:

Spot clean with mild soap and water. Ensure tent is dry before transporting or storing to prevent mildew and damage. Store in cool, dry place out of direct sunlight.